


Front Axle Squaring Guide

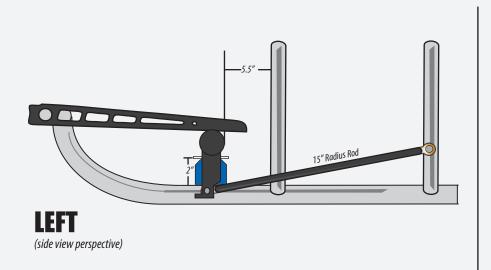

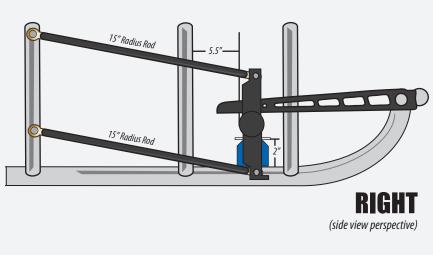

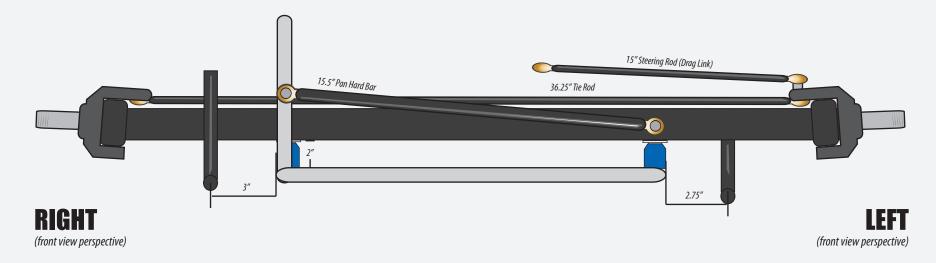

Squaring the Front Axle

- 1. After assemblying your front axle, insert into front of car on 2" set up blocks
- 2. Fasten the front radius rods, pan hard bar, and steering rod
- 3. Once installed, use a tape measue to find 6" from the face of the radiator upright, to the back of the axle (as shown)
- 4. Adjust the length of the front radius rods to find this measuement on both the left and right front of the car

Notes

